BAT 151 Battery & Electrical System Diagnostic Analyzer

Integrated Printer installation Instructions



Installing the Integrated Printer:

(refer to picture for all steps)

- Use a Phillips screwdriver to remove the screw securing the printer to the bottom of the housing. Store the screw in a safe place.
- 2. Remove the placeholder printer assembly from the housing by pulling out as shown in the picture below.
- 3. Insert the integrated printer into the compartment in the housing as shown in the diagram.
- 4. Gently guide-*do not force*-the printer into the housing until the printer is seated properly.
- 5. Insert and tighten the Philips screw that was removed in step 1.

The printer placeholder and the integrated printer can be removed by sliding away from the main housing after removing the Phillips screw on the back side



Phillips screw that secures the integrated printer